

# PROGRAM YOUR REMOTE

**ADDITIONAL INSTRUCTIONS**

*With Brand Setup Codes*





# Program Master Power

 
After you have completed the instructions on page 2, you can also program your remote control to turn your STB and TV on and off simultaneously, also known as the Master Power. Having Master Power set will eliminate the need to hit more than one button when turning your TV on and off. Follow the Master Power programming steps below.

1. Make sure your TV is on and you can see a picture.

2. Press the STB button (located on the top right side of the remote). The STB button will flash once when you press it.



3. Press and hold the SETUP button for 3 seconds until the STB button blinks twice.



4. Press 9 9 5. The STB button will blink twice after you hit the 5 button.



5. Aim the remote at the TV and press the POWER button once. The STB button will blink once.



6. Press the TV button.

 


Press the STB button.



*Note: The TV and STB buttons will light up when pressed.*

7. Press and hold the SETUP button for 3 seconds, until the STB button blinks twice.



button for 3 seconds, until the STB

The Master Power is now set.

# TABLE OF CONTENTS

Manufacturer's Codes.....	4
Setup Codes for TVs.....	4
Setup Codes for TVs (DLP).....	8
Setup Codes for TVs (HDTV).....	8
Setup Codes for (LCD).....	8
Setup Codes for TV/DVD Combos.....	9
Setup Codes for TV/VCR Combos.....	10
Setup Codes for TV/VCR/DVD Combos.....	11
Setup Codes for VCRs.....	11
Setup Codes for Audio Amplifiers.....	14
Setup Codes for Audio Receivers.....	14
Setup Codes for Audio Accessories.....	15
Setup Codes for Cable Boxes/Converters.....	15
Setup Codes for Cable/DVR/PVR Combos.....	16
Setup Codes for DVD Players.....	16
Setup Codes for DVD Recorders.....	18
Setup Codes for DVD Combos.....	18
Setup Codes for Satellite Receivers.....	19
Setup Codes for Receivers and DVR/PVR Systems.....	19

## MANUFACTURER'S CODES

### Setup Codes for TVs

A-Mark 0003	1207, 1903, 1935
Abex 0032	Alaron 0179, 0183, 0216
Accurian 1803	Albatron 0700, 0843
Action 0873I	Ambassador 0177
Admira 0093, 0463	America Action 0180
Advent 0761, 0783, 0815, 0817, 0842, 1933	Ampro 0751
Adventura 0046	Anam 0180, 0004, 0009, 0068
Aiko 0092	Anam National 0055, 0161
Aiwa 0701	AOC 0030, 0003, 0019, 0052, 0137, 0185, 1365
Akai 0812, 0702, 0030, 0098, 0672,	Apex Digital 0748, 0879, 0765, 0767, 0890, 1217, 1943

Archer 0003  
Astar 1548  
Audiovox 0451, 0180, 0092, 0003, 0623,  
0710, 0802, 0846, 0875, 1284,  
1937, 1951, 1952  
Aventura 0171  
Axion 1937  
Belcor 0019  
Bell & Howell 0154, 0016  
BenQ 1032, 1315  
Bradford 0180  
Brockwood 0019  
Broksonic 0236, 0463, 0003, 1935, 1938  
Byd:sign 1309, 1311  
Cadia 1283  
Candle 0030, 0046, 0056, 0186  
Carnivale 0030  
Carver 0054, 0170  
CCE 0217, 0329  
Celebrity 0000  
Celera 0765  
Champion 1362  
Changhong 0765  
Cinego 1986  
Citizen 0060, 0030, 0092, 0039, 0046,  
0056, 0186, 0280  
Clairtone 0185  
Clarion 0180  
Commercial Solutions 1447, 0047  
Concerto 0056  
Contec 0180, 0157, 0158, 0185  
Craig 0180, 0161  
Crosley 0054  
Crown 0180, 0039  
Curtis Mathes 0047, 0054, 0154, 0451,  
0093,  
0060, 0702, 0030, 0145, 0166,  
1347, 1147, 0747, 0466, 0056,  
0039, 0016  
CXC 0180  
CyberHome 0794  
Cytron 1326  
Daewoo 0451, 0092, 1661, 0019, 0039,  
0066, 0067, 0091, 0623, 0661,  
0672  
Daytron 0019  
Dell 1080, 1178, 1264, 1403  
Denon 0145, 0511  
Denstar 0628  
Diamond Vision 1996, 1997  
Dumont 0017, 0019  
Durabrand 0463, 0180, 0178, 0171, 1034,  
0003  
Dwin 0720, 0774  
Dynatech 0049  
Electroband 0000, 0185  
Electrograph 1623, 1755  
Electrohome 0381, 0389, 0409  
Emerson 0154, 0236, 0463, 0180, 0178,  
0171, 1963, 1944, 0623, 0282,  
0280, 0270, 0185, 0183, 0182,  
0181, 0179, 0177, 0158, 0039,  
0038, 0019  
Emprex 1422, 1546  
Envision 0030, 0813, 1365  
Epson 0833, 0840, 1290  
ESA 0812, 0171, 1944, 1963  
Fisher 0154, 0159  
FlexVision 0710  
Fujitsu 0179, 0186, 0683, 0809, 0853  
Funai 0180, 0171, 0179, 1271, 1963  
Futuretech 0180  
Gateway 1001, 1002, 1003, 1004, 1755,  
1756  
GE 1447, 0047, 0051, 0451, 0178,  
1347, 0747, 0282, 0279, 0251,  
0174, 0138, 0135, 0055, 0029,  
0027, 0021  
Gibraltar 0017, 0030, 0019  
Go Video 0886  
GoldStar 0178, 0030, 0001, 0002, 0019,  
0032, 0106, 0409  
Goodmans 0360  
Gradiente 0392  
Grunpy 0180, 0179  
Haier 1034, 0768  
Hallmark 0178  
Hannspree 1348, 1351, 1352  
Hantarex 1338  
Harley Davidson 0043, 0179

Harman/Kardon 0054, 0078  
Harvard 0180, 0068  
Havermy 0093  
Helios 0865  
Hello Kitty 0451  
Hewlett Packard 1088, 1089, 1101, 1494, 1502  
Hisense 0748  
Hitachi 1145, 0145, 0016, 0032, 0038, 0056, 0095, 0097, 0151, 0173, 0227, 0279, 0409, 0413, 0797, 1960  
HP 1088, 1089, 1101, 1494, 1502  
Hyundai 0849, 1219, 1294  
iLo 1286, 1603, 1990  
Infinity 0054  
Initial 1603, 1990  
Insignia 0171, 1204, 1326, 1517, 1963, 2002  
Inteq 0017  
Janeil 0046  
JBL 0054  
JCB 0000  
Jensen 0761, 0050, 0815, 0817, 1299, 1933  
JVC 0053, 0036, 0069, 0160, 0169, 0182, 0731, 1253  
Kamp 0216  
Kawasho 0158, 0216, 0308  
Kaypani 0052  
KEC 0180  
Kenwood 0030, 0019  
KLH 0765, 0767, 1962  
Kloss 0024, 0046, 0078  
KMC 0106  
Konka 0628, 0632, 0638, 0703, 0707  
Kost 1262, 1483  
KTV 0180, 0030, 0039, 0183, 0185, 0217, 0280  
LG 1265, 0178, 0442, 0700, 0829, 0856, 1178, 1325, 1423, 1758, 1993  
Loewe 0136  
Logik 0016  
Luxman 0056  
LXI 0047, 0054, 0154, 0156, 0178, 0148, 0747  
Magnavox 1454, 0054, 0030, 0706, 1963, 1944, 1525, 1254, 1198, 0802, 0386, 0230, 0187, 0186, 0179, 0096, 0036, 0028, 0024, 0020  
Majestic 0015, 0016  
Marantz 0054, 0030, 0444, 0704, 0854, 0855, 1154, 1398  
Matsushita 0250, 0650  
Maxent 0762, 1211, 1755  
Megapower 0700  
Megatron 0178, 0145, 0003  
MEI 0185  
Memorex 0154, 0463, 0150, 0178, 0016, 0106, 0179  
MGA 0150, 0178, 0030, 0019, 0155  
Midland 0047, 0017, 0051, 0032, 0039, 0135, 0747  
Mintek 1603, 1990  
Minutz 0021  
Mitsubishi 0093, 1250, 0150, 0178, 0014, 0019, 0098, 0155, 0331, 0358, 0836, 0868, 1550  
Monivision 0700, 0843  
Motorola 0093, 0055, 0835  
Moxell 0835  
MTC 0060, 0030, 0019, 0049, 0056, 0091, 0185, 0216  
Multitech 0180, 0049, 0217  
NAD 0156, 0178, 0866  
NEC 0030, 0019, 0036, 0056, 0170, 0434, 0497, 0882, 1398, 1704  
Neovia 1338  
NetTV 0762, 1755  
Nikko 0178, 0030, 0092, 0317  
Noblex 0430  
Norcent 0748, 0824, 1089, 1365, 1589, 1590, 1591  
Norwood Micro 1286, 1296, 1303  
Noshi 0018  
NTC 0092  
Olevia 1144, 1240, 1331, 1610  
Olympus 1342  
Onwa 0180

Optimus 0154, 0250, 0166, 0650  
Optoma 0887  
Optonica 0093, 0165  
Orion 0236, 0463, 1463, 0179  
Panasonic 0250, 0051, 0055, 0162, 0226,  
0338, 0375, 0650, 1291, 1410,  
1941, 1946, 1947  
Penney 0047, 0156, 0051, 0060, 0178,  
0030, 1347, 0747, 0309, 0149,  
0138, 0135, 0110, 0039, 0032,  
0027, 0021, 0019, 0018, 0003,  
0002  
Petters 1523  
Philco 0054, 0030, 0019, 0020, 0028,  
0096, 0302  
Philips 1454, 0054, 0690, 1154, 1483  
Pilot 0030, 0019, 0039  
Pioneer 0166, 0038, 0172, 0679, 0866,  
1260, 1398  
Polaroid 0765, 0865, 1262, 1276, 1314,  
1316, 1326, 1327, 1328, 1341,  
1498, 1523, 1991, 1992  
Portland 0092, 0019, 0039  
Prima 0761, 0783, 0815, 0817, 1933  
Princeton 0700, 0717  
Prism 0051  
Proscan 1447, 0047, 0747, 1347  
Proton 0178, 0003, 0031, 0052, 0466  
Prottron 1320, 1323  
Proview 0835, 1401, 1498  
Pulsar 0017, 0019  
Quasar 0250, 0051, 0055, 0165, 0219,  
0650  
RadioShack 0047, 0154, 0180, 0178, 0030,  
0019, 0032, 0039, 0056, 0165,  
0409, 0747  
RCA 1447, 0047, 2002, 1958, 1953,  
1948, 1547, 1347, 1247, 1147,  
1047, 0747, 0679, 0278, 0174,  
0135, 0090, 0038, 0029, 0019,  
0018  
Realistic 0154, 0180, 0178, 0030, 0019,  
0032, 0039, 0056, 0165  
Rhapsody 0183, 0185, 0216  
Runco 0017, 0030, 0251, 0497, 0603,  
1398  
Sampo 0030, 0032, 0039, 0052, 0100,  
0110, 0762, 1755  
Samsung 0060, 0812, 0702, 0178, 0030,  
1903, 1575, 1395, 1312, 1060,  
0814, 0766, 0427, 0408, 0329,  
0056, 0032, 0019  
Samsux 0039  
Sansui 0463, 1409, 1935  
Sanyo 0154, 0088, 0107, 0146, 0159,  
0232, 0484, 0799, 0893, 1142  
Sceptre 0878, 1217, 1360, 1599  
Scimitsu 0019  
Scotch 0178  
Scott 0236, 0180, 0178, 0019, 0179,  
0309  
Sears 0047, 0054, 0154, 0156, 0178,  
0171, 0015, 0056, 0146, 0148,  
0149, 0159, 0168, 0179, 0281,  
0747  
Sharp 0093, 0039, 0153, 0157, 0165,  
0220, 0281, 0386, 0398, 0491,  
0688, 0689, 0818, 0851, 1602  
Sheng Chia 0093  
Sherwood 1399  
Shogun 0019  
Signature 0016  
Signet 1262  
SIM2 Multimedia 1297  
Simpson 0186, 0187  
Sony 1100, 0000, 0011, 0080, 0111,  
0273, 0353, 0810, 0834, 1317  
Soundesign 0180, 0178, 0179, 0186  
Sova 1320, 1952  
Soyo 1520  
Spectricon 0003, 0137  
Squareview 0171  
SSS 0180, 0019  
Starlite 0180  
Studio Experience 0843  
Superscan 0093, 0864  
Supre-Macy 0046  
Supreme 0000  
SVA 0748, 0587, 0768, 0865, 0870,  
0871, 0872

Sylvania 0054, 0030, 0171, 0020, 0028,  
0065, 0096, 0381, 1271, 1944,  
1963  
Symphonic 0180, 0171, 1944  
Syntax 1144, 1240, 1331  
Tandy 0093  
Tatung 0003, 0049, 0055, 0396, 1101,  
1285, 1286, 1287, 1288, 1361,  
1756  
Technics 0250, 0051  
Technol Ace 0179  
Technovox 0007  
Techview 0847  
Techwood 0051, 0003, 0056  
Teknika 0054, 0180, 0150, 0060, 0092,  
0016, 0019, 0039, 0056, 0175,  
0179, 0186, 0312, 0322  
Telefunken 0702, 0056, 0074  
Tera 0031  
Thomson 0209, 0210  
TMK 0178, 0056, 0177  
TNCi 0017  
Toshiba 0154, 1256, 0156, 1265, 0060,  
1945, 1935, 1704, 1656, 1635,  
1356, 1343, 1325, 1306, 1156,  
0845, 0832, 0650, 0149, 0036  
Tosonic 0185  
Totevision 0039  
Trical 0157  
TVS 0463  
Ultra 0391, 1323  
Universal 0027  
Universum 1337  
US Logic 1286, 1303  
Vector Research 0030  
Victor 0053  
Video Concepts 0098  
Vidikron 0054, 0242, 1398  
Vidtech 0178, 0019, 0036  
Viewsonic 0797, 0857, 0864, 0885, 1330,  
1342, 1578, 1627, 1755  
Viking 0046, 0312  
Viore 1207  
Visart 1336  
Vizio 0864, 0885, 1499, 1756, 1758

Wards 0054, 0178, 0030, 1156, 0866,  
0202, 0179, 0174, 0165, 0111,  
0096, 0080, 0056, 0029, 0028,  
0027, 0021, 0020, 0019, 0016  
Waycon 0156  
Westinghouse 0885, 0889, 0890, 1282,  
1577  
White Westinghouse 0463, 0623  
Wyse 1365  
Yamaha 0030, 0019, 0769, 0797, 0833,  
0839  
Zenith 0017, 0463, 1265, 0178, 0092,  
0016  
Zonda 0003

### **Setup Codes for TVs (DLP)**

Hewlett Packard 1494  
HP 1494  
LG 1265  
Magnavox 1525  
Mitsubishi 1250  
Optoma 0887  
Panasonic 1291  
RCA 1447  
Samsung 0812, 1060, 1312  
SVA 0872  
Toshiba 1265, 1306  
Vizio 1499

### **Setup Codes for TVs (HDTV)**

Advent 0842  
Hitachi 1960  
Marantz 0854  
Mitsubishi 0150  
Panasonic 0250, 0650, 1291  
Pioneer 0679  
Princeton 0717  
RCA 1447  
Samsung 0812, 0702  
Sharp 0688, 0689  
Toshiba 1256

### **Setup Codes for TVs (LCD)**

Accurian 1803  
Action 0873

Akai 1935  
AOC 1365  
Apex Digital 0890, 1217  
Astar 1548  
Audiovox 0180, 0710, 0802, 0846,  
0875, 1284, 1937, 1951,  
1952  
BenQ 1315  
Byd:sign 1309, 1311  
Cadia 1283  
CyberHome 0794  
Dell 1080, 1178, 1264  
Emprex 1422, 1546  
Envision 0813, 1365  
FlexVision 0710  
Funai 0171  
Go Video 0886  
Hannspree 1348, 1351  
Hewlett Packard 1088  
HP 1088  
Hyundai 0849, 1219, 1294  
iLo 1286, 1603, 1990  
Initial 1603, 1990  
Insignia 1204, 1517, 2002  
Jensen 1299  
Kost 1262  
LG 0856, 1178, 1993  
Magnavox 1454, 0802, 1198  
Marantz 0855  
Maxent 0762, 1211  
Mintek 1603, 1990  
Mitsubishi 1250  
NetTV 0762  
Norcent 1365, 1589, 1591  
Norwood Micro 1286, 1296  
Olevia 1144, 1240, 1331, 1610  
Panasonic 0650, 1941  
Petters 1523  
Philips 1454, 1483  
Polaroid 1262, 1276, 1316, 1341,  
1498, 1523  
Protron 1320, 1323  
Proview 1401  
RCA 0047, 1958  
Sampo 0762  
Samsung 0812, 0766, 0814, 1395,  
1575  
Sansui 1409  
Sanyo 1142  
Sceptre 0878, 1217, 1360, 1599  
Sharp 0093, 0818, 1602  
Sherwood 1399  
Signet 1262  
Sony 0810  
Sova 1320  
Soyo 1520  
Superscan 0864  
SVA 0587, 0870, 0871  
Sylvania 0171, 1271  
Symphonic 0171  
Syntax 1144, 1240, 1331  
Tatung 1286  
Techview 0847  
Toshiba 0845, 1343, 1635, 1656  
Ultra 1323  
US Logic 1286  
Vidikron 1398  
Viewsonic 0857, 0864, 0885, 1330,  
1578, 1627  
Visart 1336  
Vizio 0864, 0885, 1756  
Westinghouse 0885, 0889, 0890, 1282,  
1577  
Wyse 1365  
Zenith 1265

### **Setup Codes for TV/DVD Combos Controlled by the TV**

Accurian 1803  
Advent 1933  
Akai 1935  
Apex Digital 1943  
Audiovox 1937, 1951, 1952  
Axion 1937  
Broksonic 1935  
Cinego 1986  
Diamond Vision 1997  
Emerson 1963  
ESA 1963  
Funai 1963

Hitachi 1960  
iLo 1990  
Initial 1990  
Insignia 1963, 2002  
Jensen 1933  
KLH 1962  
LG 1993  
Magnavox 1963  
Mintek 1990  
Panasonic 1941  
Polaroid 1991  
Prima 1933  
RCA 1948, 1958, 2002  
Samsung 1903  
Sansui 1935  
Sova 1952  
Sylvania 1963  
Toshiba 1635, 1935

### **Controlled by the DVD**

Advent 1016  
Akai 0695  
Apex Digital 0830  
Audiovox 1071, 1121, 1122  
Axion 1071  
Broksonic 0695  
Cinego 1399  
Diamond Vision 1610  
Emerson 0675, 1268  
ESA 1268  
Funai 1268  
Go Vision 1071  
Hitachi 1247  
iLo 1472  
Initial 1472  
Insignia 1268  
Jensen 1016  
KLH 1261  
Konka 0719, 0720  
LG 1526  
Magnavox 1268  
Mintek 1472  
Panasonic 1490  
Philips 0854, 1260  
Polaroid 1480

Prima 1016  
RCA 1022, 1193  
Samsung 0899  
Sansui 0695  
Sova 1122  
Sylvania 0675, 1268  
Toshiba 0695

### **Setup Codes for TV/VCR Combos Controlled by the TV**

America Action 0180  
Audiovox 0180  
Emerson 0236

### **Controlled by the VCR**

America Action 0278  
Audiovox 0278  
Broksonic 0002, 0479, 1479  
Citizen 1278  
Colt 0072  
Curtis Mathes 1035  
Daewoo 0637, 1278  
Emerson 0002, 0294, 0479, 0593,  
1278, 1479  
Funai 0000  
GE 0240, 0807, 1035, 1060  
GoldStar 1237  
Harley Davidson 0000  
Hitachi 0000  
LG 1037  
Lloyd's 0000  
Magnasonic 0593, 1278  
Magnavox 0000, 0593, 1781  
Magnin 0240  
Memorex 0162, 0454, 1037, 1162,  
1237, 1262  
MGA 0240  
Mitsubishi 0807  
Optimus 0162, 0454, 0593, 1162,  
1262  
Orion 0002, 0479, 1479  
Panasonic 0162, 1035, 1162, 1262  
Penney 0240, 1035, 1237  
Quasar 0162, 1035, 1162  
RadioShack 0000, 1037

RCA 0240, 0807, 1035, 1060  
Samsung 1014  
Sansui 0000, 0479, 1479  
Sanyo 0240  
Sears 0000, 1237  
Sony 0000, 1232  
Sylvania 1781  
Symphonic 0000, 0593  
Thomas 0000  
Toshiba 0845, 1145  
White Westinghouse 0637  
Zenith 0000, 0479, 0637, 1479

### **Setup Codes for TV/VCR/DVD Combos**

#### **Controlled by the TV**

Akai 1903  
Broksonic 1938  
Diamond Vision 1996  
Emerson 1944  
ESA 1944  
Magnavox 1944  
Panasonic 1946, 1947  
Polaroid 1992  
RCA 1953  
Sylvania 1944  
Symphonic 1944  
Toshiba 1945

#### **Controlled by the DVD**

Akai 0899  
Broksonic 0868  
Diamond Vision 1609  
Emerson 0821  
ESA 0821  
Funai 1334  
Magnavox 0821  
Panasonic 1362, 1462  
Polaroid 1482  
RCA 1132  
Sharp 0630  
Superscan 0821  
Sylvania 0821  
Symphonic 0821  
Toshiba 1045

#### **Controlled by the VCR**

Sharp 0807

#### **Setup Codes for VCRs**

ABS 1972  
Admiral 0048, 0209  
Adventura 0000  
Aiko 0278  
Aiwa 0037, 0000, 0124, 0307, 0468  
Akai 0041, 0049, 0053, 0061, 0106, 0175  
Alienware 1972  
America Action 0278  
American High 0035  
Asha 0240  
Audiovox 0037, 0278  
Beaumarck 0240  
Bell & Howell 0104  
Broksonic 0184, 0121, 0209, 0002, 0211, 0295, 0361, 0479, 1479, 1815  
Calix 0037  
Canon 0035, 0102  
Capehart 0020  
Carver 0081  
CCE 0072, 0278  
Citizen 0037, 0278, 1278  
Colt 0072  
Craig 0037, 0047, 0240, 0072, 0271  
Curtis Mathes 0060, 0035, 0162, 0041, 0760, 1035  
Cybernex 0240, 0051  
CyberPower 1972  
Daewoo 0045, 0278, 0020, 0561, 0637, 1278  
Daytron 0020  
Dell 1972  
Denon 0042  
DirecTV 0739  
Durabrand 0039, 0038  
Dynatech 0000  
Electrohome 0037  
Electroponic 0037

Emerex 0032  
Emerson 0037, 0184, 0000, 0121,  
0043, 0209, 0002, 0278,  
1479, 1278, 0637, 1593,  
0593, 0561, 0510, 0479,  
0361, 0295, 0294, 0212,  
0211, 0208, 0088, 0068,  
0061, 0036  
Fisher 0047, 0104, 0054, 0066  
Fuji 0035, 0033  
Funai 0000, 0593, 1593  
Garrard 0000  
Gateway 1972  
GE 0060, 0035, 0240, 0065,  
0202, 0760, 0761, 0807,  
1035, 1060  
Go Video 0232, 0279, 0432, 0526,  
0643  
GoldStar 0037, 0038, 0018, 1237  
Gradiente 0000, 0408  
Grundig 0195  
Harley Davidson 0000  
Harman/Kardon 0081, 0038, 0075  
Harwood 0072, 0068  
Headquarter 0046  
Hewlett Packard 1972  
HI-Q 0047  
Hitachi 0000, 0042, 0041, 0065,  
0082, 0089, 0105, 0166  
Howard Computers 1972  
HP 1972  
Hughes Network Systems 0042, 0739  
Humax 0739  
Hush 1972  
iBUYPOWER 1972  
Jensen 0041  
JVC 0067, 0041, 0008, 0206,  
0207, 0384, 1707  
KEC 0037, 0278  
Keen 0693  
Kenwood 0067, 0041, 0038, 0384  
KLH 0072  
Kodak 0035, 0037  
LG 1037  
Linksys 1972  
Lloyd's 0000, 0208  
Logik 0072  
LXI 0037  
Magnasonic 0593, 1278  
Magnavox 0035, 0039, 0081, 0000,  
0149, 0110, 0563, 0593,  
1593, 1781  
Magnin 0240  
Marantz 0035, 0081  
Marta 0037  
Matsushita 0035, 0162, 1162  
Media Center PC 1972  
MEI 0035  
Memorex 0035, 0162, 0037, 0048,  
0039, 0047, 0240, 0000,  
0104, 0209, 0046, 0307,  
0454, 0479, 1037, 1162,  
1237, 1262  
MGA 0240, 0043, 0061  
MGN Technology 0240  
Microsoft 1972  
Mind 1972  
Minolta 0042, 0105  
Mitsubishi 0067, 0043, 0061, 0075,  
0173, 0443, 0807  
Motorola 0035, 0048  
MTC 0240, 0000  
Multitech 0000, 0072  
NAD 0058  
NEC 0104, 0067, 0041, 0038,  
0040, 0050, 0082  
Nikko 0037  
Nikon 0034  
Niveus Media 1972  
Noblex 0240  
Northgate 1972  
Olympus 0035, 0226  
Onkyo 0222  
Optimus 1062, 0162, 0037, 0048,  
0104, 0058, 0432, 0454,  
0593, 1048, 1162, 1262  
Optonica 0062  
Orion 0184, 0209, 0002, 0295,  
0479, 1479  
Panasonic 1062, 0035, 0162, 0077,

0102, 0225, 0226, 0227,  
0378, 0454, 0616, 1035,  
1162, 1262  
Penney 0035, 0037, 0240, 0042,  
0038, 0040, 0054, 1035,  
1237  
Pentax 0042, 0065, 0105  
Philco 0035  
Philips 0035, 0081, 0062, 0110,  
0618, 0739, 1081, 1181  
Pilot 0037  
Pioneer 0067, 0058  
Polk Audio 0081  
Portland 0020  
Presidian 1593  
Profitronic 0240  
Proscan 0060, 0202, 0760, 0761,  
1060  
Protec 0072  
Pulsar 0039, 0051  
Quarter 0046  
Quartz 0046  
Quasar 0035, 0162, 0077, 0454,  
1035, 1162  
RadioShack 0000, 1037  
Radix 0037  
Randex 0037  
RCA 0060, 0240, 0042, 0149,  
0058, 0065, 0077, 0105,  
0106, 0202, 0760, 0761,  
0807, 0880, 1035, 1060  
Realistic 0035, 0037, 0048, 0047,  
0000, 0104, 0046, 0062,  
0066  
ReplayTV 0614, 0616  
Ricavision 1972  
Ricoh 0034  
Runco 0039  
Salora 0075  
Samsung 0240, 0045, 0051, 0053,  
0739, 1014  
Samtron 0643  
Sanky 0048, 0039  
Sansui 0000, 0067, 0209, 0041,  
0082, 0271, 0479, 1479  
Sanyo 0047, 0240, 0104, 0046,  
0159  
Scott 0184, 0045, 0121, 0043,  
0210, 0211, 0212  
Sears 0035, 0037, 0047, 0000,  
0042, 0104, 0046, 0054,  
0066, 0105, 1237  
Sharp 0048, 0062, 0807, 0848  
Shintom 0072  
Shogun 0240, 0051  
Singer 0072  
Sonic Blue 0614, 0616  
Sony 0035, 0032, 0033, 0000,  
0011, 0034, 0636, 1032,  
1232, 1972  
Stack 9 1972  
STS 0042  
Sylvania 0035, 0081, 0000, 0043,  
0110, 0593, 1593, 1781  
Symphonic 0000, 0593, 1593  
Systemax 1972  
Tagar Systems 1972  
Tatung 0041  
Teac 0000, 0041  
Technics 0035, 0162  
Teknika 0035, 0037, 0000, 0052  
Thomas 0000  
Tivo 0618, 0636, 0739, 1996  
TMK 0240, 0036, 0208  
Toshiba 0045, 0043, 0066, 0210,  
0212, 0366, 0845, 1008,  
1145, 1972, 1996  
Totevision 0037, 0240  
Touch 1972  
Unitech 0240  
Vector 0045  
Vector Research 0038, 0040  
Video Concepts 0045, 0040, 0061  
Videomagic 0037  
Videosonic 0240  
Viewsonic 1972  
Villain 0000  
Voodoo 1972  
Wards 0060, 0035, 0048, 0047,  
0081, 0240, 0000, 0042,

0072, 0149, 0062, 0212,  
0760  
White Westinghouse 0209, 0072, 0637  
XR-1000 0035, 0000, 0072  
Yamaha 0038  
Zenith 0039, 0033, 0000, 0209,  
0034, 0479, 0637, 1139,  
1479  
ZT Group 1972

### **Setup Codes for Audio Amplifiers**

Adcom 0577, 1100  
Bose 0674  
Durabrand 1561  
Elan 0647  
GE 0078  
Harman/Kardon 0892  
JVC 0331  
Left Coast 0892  
Lenox 1561  
Luxman 0165  
Marantz 0892, 0321  
McIntosh 0251  
Nakamichi 0321  
NEC 0264  
Optimus 0395, 0823  
Parasound 0246  
Philips 0892  
Pioneer 0823  
Polk Audio 0892  
RCA 0823  
Realistic 0395  
Sansui 0321  
Shure 0264  
Sony 0689, 0815, 1126  
Soundesign 0078, 0211  
Victor 0331  
Wards 0078, 0211  
Yamaha 0354, 0133

### **Setup Codes for Audio Receivers**

ADC 0531  
Aiwa 1405, 0189, 0121, 0405,  
1243, 1388, 1641  
Akai 1512

Alco 1390  
Amphion Media Works 1563, 1615  
AMW 1563, 1615  
Anam 1609, 1074  
Apex Digital 1257, 1430, 1774  
Arcam 1120  
Audiotronic 1189  
Audiovox 1390, 1627  
B & K 0701, 0820, 0840  
BK 0702  
Bose 1229, 1629, 1841, 1933  
Cambridge Soundworks 1370  
Capetronic 0531  
Carver 1189, 0189  
Classic 1352  
Coby 1389  
Curtis Mathes 0080  
Daewoo 1250  
Delphi 1414  
Denon 1360, 0004, 1142  
Fisher 1801  
Gateway 1517  
Go Video 1532  
Harman/Kardon 0110, 0189, 0891, 1304,  
1306  
Hitachi 1801  
Integra 0135, 1298, 1320  
JBL 0110, 1306  
JVC 1374, 1495, 1811, 1871  
Kenwood 1313, 1570, 1569, 0186  
KLH 1390, 1412, 1428  
Koss 1366, 1497  
Lasonic 1798  
LG 1293  
Linn 0189  
Liquid Video 1497  
Magnavox 1189, 1269, 0189, 0391,  
0531, 1514  
Marantz 1189, 1269, 0189, 1289  
Mitsubishi 1393  
Norcent 1389  
Nova 1389  
Onkyo 0135, 0842, 1298, 1320,  
1531  
Optimus 1023, 0080, 0186, 0531,

0670, 1074  
Oritron 1366, 1497  
Panasonic 1308, 1518, 0309, 0367,  
1288, 1316, 1548, 1633,  
1763, 1764  
Philips 1189, 1269, 0189, 0391,  
1120, 1266  
Pioneer 1023, 0014, 0080, 0150,  
0244, 0531, 0630, 1384  
Polaroid 1508  
Polk Audio 0189, 1289, 1414  
Proscan 1254  
RCA 1023, 1609, 1254, 0080,  
0531, 1074, 1390, 1511  
Rio 1869  
Samsung 1295, 1500  
Sansui 0189  
Sanyo 1251, 1469, 1801  
Sharp 0186, 1286  
Sharper Image 1556  
Sherwood 1077, 1517, 1653  
Sirius 1627, 1811, 1987  
Sonic Blue 1532, 1869  
Sony 1058, 1441, 1258, 1759,  
1622, 0474, 1349, 1406,  
1442, 1558, 1658, 1758,  
1858  
Soundesign 0670  
Stereophonics 1023  
Sunfire 1313  
Teac 1074, 1390, 1528  
Technics 1308, 1518, 0309  
Thorens 1189  
Toshiba 1788  
Venturer 1390  
Wards 0189, 0014, 0080  
XM 1406, 1414  
Yamaha 0176, 0186, 1176, 1276,  
1331, 1375  
Zenith 0857, 1293

### **Setup Codes for Audio Accessories**

Accurian 1106  
Altec Lansing 0607, 1056, 1485  
Apple 1115, 1644

Cambridge Soundworks 1530  
Creative 0872  
D-Link 1522  
DLO 1155  
Integra 1789  
iPort 1917  
Marantz 1491  
Motorola 1464  
NaviPod 1644  
Netgear 1785  
Omnifi 1605  
Onkyo 1789  
Roku 1828  
Sonance 1917  
SSI 1522  
Yamaha 1809, 1810

### **Setup Codes for Cable Boxes/Converters**

ABC 0003, 0008, 0014, 0017  
Americast 0899  
Amino 1602, 1822  
Bell & Howell 0014  
Bell South 0899  
Clearmaster 0883  
ClearMax 0883  
Coolmax 0883  
Digeo 1187  
Digi 0637  
Director 0476  
Dumont 0637  
General Instrument 0476, 0810, 0276,  
0003  
GoldStar 0144  
Hamlin 0009, 0273  
i3 Micro 1602  
Jerrold 0476, 0810, 0276, 0003,  
0012, 0014  
Memorex 0000  
Motorola 1376, 0476, 0810, 0276,  
1187, 1254, 1106, 1540  
Multitech 0883  
Myrio 1602, 1822  
Pace 1376, 1877, 0237, 0008  
Panasonic 1376, 1877, 0000, 0107  
Panther 0637

Paragon 0000  
Philips 1305, 0317  
Pioneer 1877, 0877, 0144, 0533  
Pulsar 0000  
Quasar 0000  
RadioShack 0883  
RCA 1256  
Regal 0279, 0273  
Runco 0000  
Samsung 1376, 1877, 0144  
Sasktel 1737  
Scientific Atlanta 1877, 0877, 0477, 0008, 0017  
Sejin 1602  
Sony 1006  
Starcom 0003  
Supercable 0276  
Supermax 0883  
Thomson 1256  
Tocom 0012  
Torx 0003  
Toshiba 0000  
Tristar 0883  
V2 0883  
Viewmaster 0883  
Vision 0883  
Vortex View 0883  
Zenith 0000, 0525, 0899

### **Setup Codes for Cable/DVR/PVR Combos**

Americast 0899  
Amino 1822  
Digeo 1187  
General Instrument 0476, 0810  
Jerrold 0476, 0810  
Motorola 1376, 0810, 1187, 1106, 1540, 0476  
Myrio 1822  
Pace 1376, 1877, 0237  
Panasonic 1376, 1877  
Pioneer 1877, 0877  
RCA 1256  
Sasktel 1737  
Samsung 1376, 1877  
Scientific Atlanta 1877, 0877

Sony 1006  
Supercable 0276  
Thomson 1256  
Zenith

### **Setup Codes for DVD Players**

Accurian 1072, 1416  
Adcom 1094  
Advent 1016  
Aiwa 0641  
Akai 0695, 0770, 0899, 1089  
Alco 0790  
Allegro 0869  
Amphion Media Works 0872, 1245  
AMW 0872, 1245  
Apex Digital 0672, 0717, 0755, 0794, 0796, 0797, 0830, 1004, 1020, 1056, 1061, 1100  
Arrgo 1023  
Aspire Digital 1168, 1407  
Audiologic 0736  
Audiovox 0790, 1041, 1071, 1072, 1121, 1122  
Axion 1071, 1072  
B & K 0655, 0662  
BBK 1224  
Bel Canto Design 1571  
Blaupunkt 0717  
Blue Parade 0571  
Broksonic 0695, 0868, 1419  
Buffalo 1882  
Cary Audio Design 1477  
CAVS 1057  
Centrios 1577  
Cinea 0831  
Cinego 1399  
CineVision 0876, 0833, 0869  
Citizen 1277  
Coby 0778, 0852, 1086, 1107, 1165, 1177, 1351  
Craig 0831  
Curtis Mathes 1087  
CyberHome 0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537  
D-Link 1881

Daewoo 0784, 0705, 0833, 0869,  
1169, 1172, 1234, 1242,  
1441, 1443  
Denon 0490, 0634  
Desay 1407, 1455  
Diamond Vision 1316, 1609, 1610  
Disney 0675, 1270  
Dual 1068, 1085  
Durabrand 1127  
DVD2000 0521  
Emerson 0591, 0675, 0821, 1268  
Enterprise 0591  
ESA 0821, 1268, 1443  
Fisher 0670, 1919  
Funai 0675, 1268, 1334  
Gateway 1073, 1077, 1158  
GE 0522, 0815, 0717  
Go Video 0744, 0715, 0741, 0783,  
0833, 0869, 1044, 1075,  
1099, 1144, 1158, 1304,  
1443, 1730  
Go Vision 1071, 1072  
GoldStar 0741  
GPX 0699, 0769  
Greenhill 0717  
Harman/Kardon 0582, 0702  
Hitachi 0573, 0664, 1247, 1919  
Hiteker 0672  
iLo 1348, 1472  
Initial 0717, 1472  
Innovative Technology 1542  
Insignia 1268  
Integra 0627  
Jaton 1078  
JBL 0702  
Jensen 1016  
JSI 1423  
JVC 0558, 0623, 0867, 1164,  
1275, 1602, 1863  
jWin 1049, 1051  
Kawasaki 0790  
Kenwood 0490, 0534, 0682, 0737  
KLH 0717, 0790, 1020, 1149,  
1261  
Konka 0711, 0719, 0720, 0721  
Koss 0651, 0896, 1423  
Kreisen 1421  
Landel 0826  
Lasonic 0798, 1173  
Lenox 1127  
LG 0591, 0741, 0801, 0869,  
1526  
LiteOn 1058, 1158, 1416, 1440  
Loewe 0511  
Magnavox 0503, 0539, 0646, 0675,  
0821, 1268, 1506  
Malata 0782, 1159  
Marantz 0539  
McIntosh 1273  
Memorex 0695, 0831, 1270  
Microsoft 0522, 1708  
Mintek 0839, 0717, 1472  
Mitsubishi 1521, 0521  
Momitsu 1082  
NAD 0741  
Nakamichi 1222  
NEC 0785  
Nesa 0717, 1603  
NeuNeo 1454  
Next Base 0826  
NexxTech 1402  
Norcent 1003, 0872, 1107, 1265,  
1457  
Onkyo 0503, 0627, 0792  
Oppo 1224, 1525  
OptoMedia Electronics 0896  
Oritron 0651  
Panasonic 0490, 0632, 0703, 1362,  
1462, 1490, 1762  
Philips 0503, 0539, 0646, 0675,  
0854, 1260, 1267, 1354  
Pioneer 0525, 0571, 0631, 0632  
Polaroid 1020, 1061, 1086, 1245,  
1316, 1478, 1480, 1482  
Polk Audio 0539  
Portland 0770  
Presidian 0675, 1072  
Prima 1016  
Primare 1467  
Princeton 0674

Proscan 0522  
ProVision 0778  
Qwestar 0651  
RCA 0522, 0571, 0717, 0790,  
0822, 1022, 1132, 1193  
Rio 0869  
RJTech 1360  
Rotel 0623, 1178  
Rowa 0823  
Sampo 0698, 0752, 1501  
Samsung 0490, 0573, 0820, 0899,  
1044, 1075  
Sansui 0695  
Sanyo 0670, 0695, 0873, 1919  
Sensory Science 1158  
Sharp 0630, 0675, 0752, 1256  
Sharper Image 1117  
Sherwood 0633, 0770, 1043, 1077,  
1889  
Shinsonic 0533, 0839  
Sigma Designs 0674  
Sonic Blue 0869, 1099  
Sony 0533, 1533, 0864, 1033,  
1431, 1432, 1433, 1548,  
1892  
Sound Mobile 1298  
Sova 1122  
Sungale 1074, 1532  
Superscan 0821  
SVA 0860, 1105  
Sylvania 0675, 0821, 1268  
Symphonic 0675, 0821  
TAG McLaren 0894  
Teac 0790, 0809  
Technics 0490, 0703  
Technosonic 0730  
Techwood 0692  
Terapin 1031  
Theta Digital 0571  
Toshiba 0503, 0695, 1045, 1154,  
1854  
Tredex 0799, 0800, 0803, 0804  
Urban Concepts 0503  
US Logic 0839  
Valor 1298

Venturer 0790  
Vialta 1509  
Vizio 1064, 1226  
Vocopro 1027, 1360  
Xbox 0522, 1708  
Xwave 1001  
Yamaha 0490, 0539, 0545  
Zenith 0503, 0591, 0741, 0869  
Zoece 1265

### **Setup Codes for DVD Recorders**

Accurian 1416  
Apex Digital 1056  
Aspire Digital 1168  
Coby 1086  
CyberHome 1129, 1502  
Funai 0675, 1334  
Gateway 1073, 1158  
Go Video 0741, 1158, 1304, 1730  
iLo 1348  
JVC 1164, 1275  
Kreisen 1421  
LG 0741  
LiteOn 1158, 1416, 1440  
Magnavox 0646, 0675, 1506  
Panasonic 0490  
Philips 0646  
Pioneer 0631  
Polaroid 1086  
RCA 0522  
Samsung 0490  
Sensory Science 1158  
Sharp 0675  
Sony 1033, 1431, 1432, 1433  
Sylvania 0675  
Zenith 0741

### **Setup Codes for DVD Combos**

Akai 0695  
Audiovox 1071, 1121, 1122  
iLo 1472  
Initial 1472  
LG 1526  
Mintek 1472  
RCA 1193

## Satellite Receivers and DVR/PVR Systems Setup Codes for Satellite Receivers

AlphaStar 0772  
Amino 1615  
Chaparral 0216  
Coolsat 1806  
Crossdigital 1109  
DirecTV 1377, 0392, 0566, 0639,  
1639, 1142, 0247, 0749,  
1749, 0724, 0819, 1856,  
1076, 1108, 0099, 1109,  
1392, 1414, 1442, 1443,  
1444, 1609, 1640  
Dish Network System 1505, 1005, 0775,  
1170,  
1775  
Dishpro 1505, 1005, 0775, 1775  
Echostar 1505, 1005, 0775, 1170,  
1775  
Expressvu 0775, 1775  
GE 0566  
General Instrument 0869  
GOI 0775, 1775  
Goodmans 1246  
Hisense 1535  
Hitachi 0819, 1250  
HTS 0775, 1775  
Hughes Network Systems 1142, 0749,  
1749, 1442,  
1443, 1444  
Humax 1790  
iLo 1535  
JVC 0775, 1170, 1775  
LG 1226, 1414  
Magnavox 0724, 0722  
Memorex 0724  
Mitsubishi 0749  
Motorola 0869  
NEC 1270  
Next Level 0869  
Panasonic 0247, 0701  
Pansat 1807  
Paysat 0724  
Philips 1142, 0749, 1749, 0724,  
1076, 0722, 0099, 1442

Proscan 0392, 0566  
Proton 1535  
RadioShack 0869  
RCA 0566, 0855, 0143, 1392  
Samsung 1377, 1276, 1108, 1109,  
1442, 1609  
Sanyo 1219  
SKY 0856  
Sony 0639, 1639, 1640  
Star Choice 0869  
Tivo 1142, 1442, 1443, 1444  
Toshiba 0749, 1749, 0790, 1285  
UltimateTV 1392, 1640  
Ultrasat 1806  
Uniden 0724, 0722  
US Digital 1535  
USDTV 1535  
Voom 0869  
Zenith 1856, 0856

## Setup Codes for DVR/PVR Systems

Amino 1615  
DirecTV 1377, 0392, 0639, 1142, 1076,  
0099, 1392, 1442, 1443, 1444,  
1640  
Dish Network System 1505, 0775  
Dishpro 1505, 0775  
Echostar 1505, 0775, 1170  
Expressvu 0775  
Hughes Network Systems 1142, 1442,  
1443, 1444, 0739  
JVC 1170  
Motorola 0869  
Philips 1142, 1442, 0739  
Proscan 0392  
RCA 1392  
Samsung 1442, 0739  
Sony 0639, 1640  
Star Choice 0869



Cutting edge technology, Right in your neighborhood.