

Program the TrioTel Standard Remote to your TV

This remote is preprogrammed to control your Set Top Box (STB). The instructions below will program the remote to control your TV.

Turn the TV on.

On the remote, press the **TV** button; it will blink once.

Press and hold **SETUP** until the TV button blinks twice.

Type **9 9 1**. The TV button will blink twice.

Press **POWER**. The TV button will blink once.

Slowly press and release the **CH+** key until the TV turns off. The channel should not change. This may take several minutes. If the channel changes, you may need to replace the batteries in the remote.

Press and hold **SETUP** until the TV button blinks twice. The code has been saved.

Press **POWER**. The TV should turn on. If not, repeat the steps.

Press the **STB** button.

Check to see that the volume and mute buttons are working. If not, repeat the steps to try a different code.



Program Master Power on the TrioTel Standard Remote

After you have programmed the remote to control your TV, follow the instructions below to program Master Power. Master Power will sequentially turn on or off both the TV and STB with a single press of the POWER key.

On the remote, press the **STB** button; it will blink once.

Press and hold **SETUP** until the STB button blinks twice.

Type **9 9 5**. The STB button will blink twice.

Press **POWER**. The STB button will blink once.

Press the **TV** button.

Press **POWER**.

Press the **STB** button.

Press **POWER**.

Press and hold **SETUP** until the STB button blinks twice.

To use Master Power, press and hold **POWER** to sequentially turn on or off both the TV and STB.